



FRONT BRUSHES RANDOMLY START & STOP ROTATING WHILE SWEEPING

RESOLUTION: ADJUST ROTATION ACTIVATOR SWITCH FOR FRONT BRUSHES

1. TURN OFF MACHINE
BEFORE STARTING ADJUSTMENT

2. LIFT HOOD
ACCESS KNOBS TO REMOVE SIDE PANEL


LOCATION OF ADJUSTMENT
BRUSH ROTATION SWITCH

3. REMOVE FOR ACCESS
SIDE PANEL COVER



INITIAL STEPS



1. Make sure machine is turned off and in a safe area to complete adjustment.
2. Lift Hood
3. Remove side panel (A) by loosening fasteners (B and C) to reveal the front brush rotation switch (D).

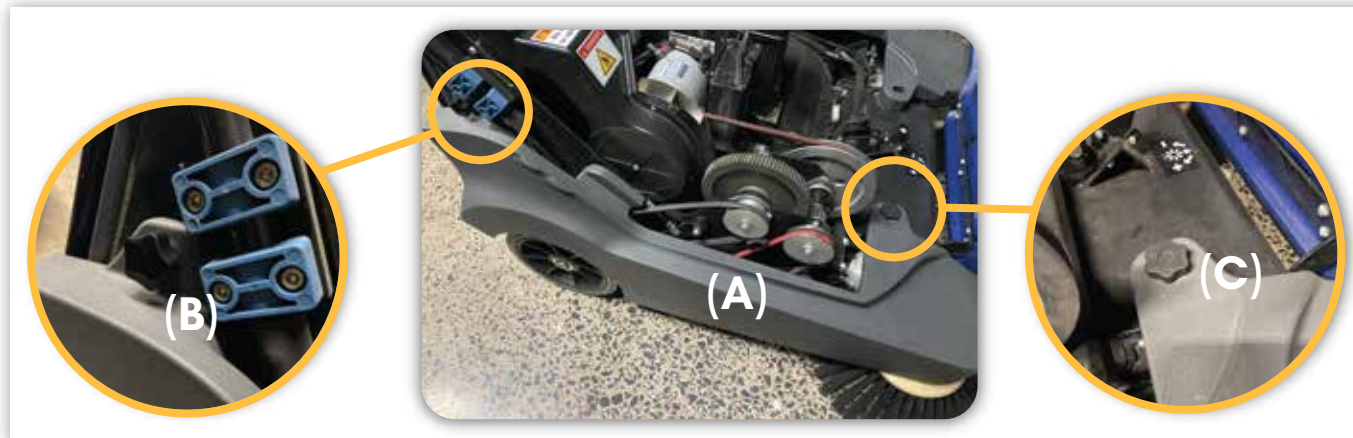

INITIAL STEPS CONT'D

(D) Front brush rotation activation switch.

Test: Manually raise front brush, you should hear a 'click' indicating that is the moment the brush will stop sweeping.

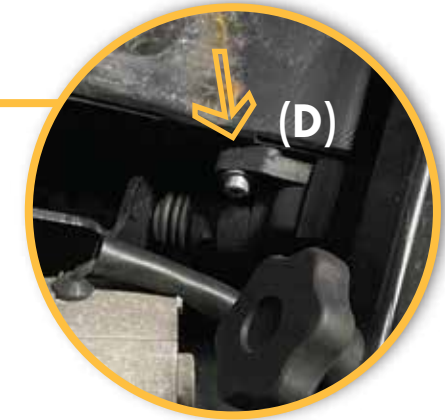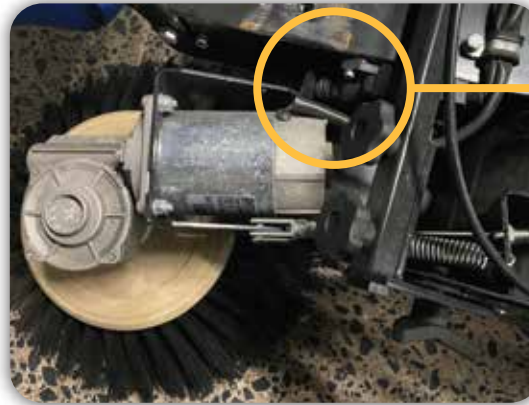


SIDE PANEL REMOVED

4. Using an allen wrench, loosen the top (E) and bottom nuts*(bottom nut is not visible in the picture).
*You will need a long allen wrench to reach bottom nut.

5. Slide the nut forward or back to the preferred adjustment (F). **Test by manually lifting the front brush** and hearing the 'click' indicating the front brush rotation will be "shut off" temporarily while going over an uneven surface.

6. Repeat on opposite side.

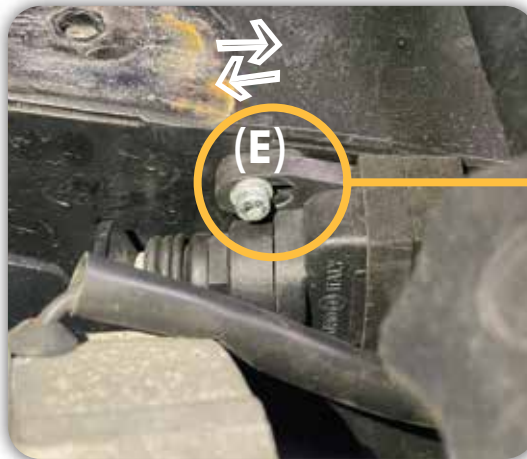

(F) SLIDE THIS BOLT & RETIGHTEN