





HammerheadClean.com

Step 1: Get familiar with what you're working with.

After un-crating the machine, scan the QR code on the control panel to access all available manuals.

CONTROLS & LEVERS

FLAP OPENING LEVER

Use lever when sweeping a larger piece of debris.

RIGHT BRUSH ACTIVATION LEVER

FORWARD RUNNING CONTROL LEVER

LEFT BRUSH ACTIVATION LEVER

LEVER RELEASE



DUST SUCTION CONTROL LEVER Lift up to open when sweeping over any liquid or wet material. Close when done.



FILTER SHAKER CONTROL Do not "yank" on handle like starting an engine. Raise & lower swiftly to empty contents of filter into hopper.



It stops the machine if the main cover (3) is lifted when the machine is operative.

UNDER THE HOOD

BATTERY CHARGE INDICATOR



OFF IDLE OFF ON

STARTING KEY

Step 2: Make some adjustments.

Turn off machine before performing any adjustments.

Adjust the Handlebars


Lift the main hood.

Release the 8 screws.

Adjust the handlebar at the desired height for work, then tighten the screws.





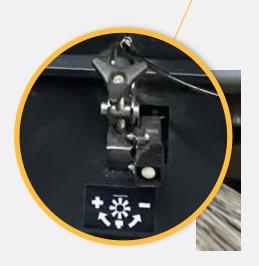


Adjust the Main Brush Pressure

Lift the main hood.

Use the adjustment handle & turn it to the right to INCREASE pressure (+) and to the left to DECREASE pressure (-).

Test an area and adjust as needed.

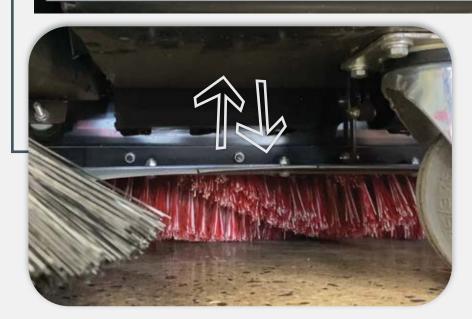

Step 3: Charge it up.

Turn key to IDLE to determine current charge on indicator light.



Charging the Machine

Position the machine close to the battery charging area.*

Check that the battery charger is connected to the battery.

Check that the charging cord is connected to the battery charger, then plug into outlet.

Once the battery indicator shows green, disconnect.




ON-BOARD CHARGER

TURN KEY TO THE 'OFF' POSITION


Connect included cord to charger and make sure battery is connected to the charger.

*Charge battery when indicator light is **RED**.

GREEN= FULL CHARGE YELLOW= MINIMUM CHARGE RED= BATTERY DISCHARGED

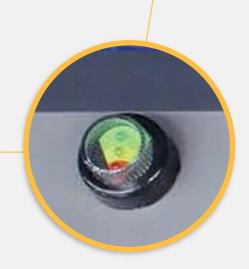

ENGINEERED SIMPLICITY

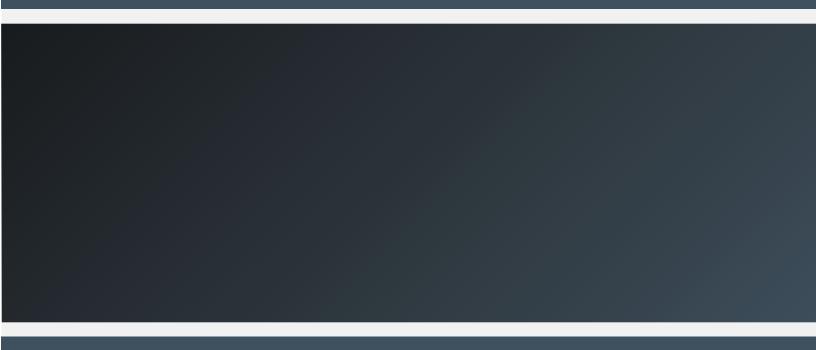



CONTACT US info@hammerheadclean.com HammerheadClean.com